

	PAL MELAMINAT / MELAMINE FACED CHIPBOARD "VISION"	BANDĂ CANT / EDGE BAND "RAUKANTEK"	BANDĂ CANT / EDGE BAND	BANDĂ CANT / EDGE BAND	BANDĂ CANT / EDGE BAND
	COD DECOR / DECOR CODE STRUCTURA / STRUCTURES	NUMĂR DECOR / DECOR NUMBER	NUMĂR DECOR / DECOR NUMBER	NUMĂR DECOR / DECOR NUMBER	NUMĂR DECOR / DECOR NUMBER
1	A316, PS11	7974	HD 282227	533	807650
2	A319, PS17	5349	HD 264014	503	807710
3	A333, PS17	7846	HD 280544	530	803151
4	A353, PS17	799E	HD 24354	550	807620
5	A354, PS19	758W	HD 244272	555	803290
6	A356, PS11	641W	HD 289775	583	807670
7	A357, PS19	1043W	HD 251474	575	807970
8	A359, PS17	4187	HD 28775	529	807200
9	A373, PS11	771W	HD 283031	689	803420
10	A379, PS11	1318W	HD 282715	682	807380
11	A380, PS11	340V	HD 287902	692	805610
12	A391, PS19	063L	HD 29391	1066	807430
13	A392, PS19	058T	HD 29392	679	807430
14	A394, PS19	063T	HD 298566	918	805710
15	A395, PS19	2021W	HD 241377	965	808890
16	A396, PS19	1440W	HD 242609	872	808790
17	A398, PS17	1056W	HD 288339	956	803730
18	A400, PS19	695V	HD 283005	905	807610
19	A411, PS19	972W	HD 26411	1149	807400
20	A414, PS19	888W	HD 248718	1012	807740
21	A415, PS19	2060W	HD 293078	512	803280
22	A416, PS11	1522W	HD 288953	842	803730
23	A417, PS13	2542W	HD 273223	969	
24	A418, PS11	1229W	HD 242337	966	808900
25	A419, PS11	1297W	HD 29419	967	807390
26	A423, PS13	2519W	HD 28423	1130	808880
27	A429, PS13	2721W	HD 262578	1335	
28	A431, PS13	2166Z	HD 253766	1336	
29	A433, PS11	2512E	HD 268069	1238	
30	A439, PS11	2060W	HD 242542	1337	
31	A800, PS17	7042	HD 22344	543	808280
32	A801, PS11	1085W	HD 220340	996	802810
33	A802, PS17	4759	HD 211639	997	807850
34	A803, PS17	7304	HD 230685	817	802340
35	A804, PS17	2315W	HD 241145	980	807220
36	A805, PS17	2312W	HD 24805	981	806860
37	A806, PS11	406W	HD 241394	982	807910
38	A807, PS11	897E	HD 22807	983	806810
39	A808, PS11	814W	HD 24808	990	807640
40	A809, PS11	926V	HD 262040	984	806930
41	A810, PS11	327W	HD 221615	541	802000
42	A811, PS11	339W	HD 283704	991	805310
43	A812, PS17	2313W	HD 29812	840	807230
44	A814, PS17	2000W	HD 283058	839	806680
45	A815, PS17	6897	HD 259320	1282	808000
46	A816, PS10	5287	HD 23352	1283	807680
47	A817, PS11	7824	HD 28854	988	807600
48	A818, PS17	7088	HD 211586	998	802282
49	A819, PS17	7128	HD 24740	867	800720
50	A820, PS19	2311W	HD 246837	644	802300
51	A821, PS17	4266	HD 24327	643	806180
52	A822, PS11	339W	HD 289757	985	805410
53	A823, PS19	755V	HD 291428	599	807570
54	A824, PS17	532W	HD 24326	986	807630
55	A825, PS17	1319W	HD 280544	816	804155
56	A826, PS19	8818	HD 29583	987	801512
57	A827, PS11	319W	HD 271350	994	807450
58	A829, PS19	1693W	HD 298361	814	807560
59	A830, PS19	1692W	HD 298362	815	807790
60	A831, PS17	352W	HD 281137	989	804240

	PAL MELAMINAT / MELAMINE FACED CHIPBOARD "VISION"	BANDĂ CANT / EDGE BAND "RAUKANTEK"	BANDĂ CANT / EDGE BAND	BANDĂ CANT / EDGE BAND	BANDĂ CANT / EDGE BAND
	COD DECOR / DECOR CODE STRUCTURA / STRUCTURES	NUMĂR DECOR / DECOR NUMBER	NUMĂR DECOR / DECOR NUMBER	NUMĂR DECOR / DECOR NUMBER	NUMĂR DECOR / DECOR NUMBER
61	A832, PS17	4499	HD 28776	813	808050
62	A833, PS17	7217	HD 241342	542	807140
63	A834, PS11	8673	HD 221764	1284	802940
64	A835, PS11	058V	HD 221951	995	801260
65	A836, PS11	011W	HD 211599	999	804060
66	A838, PS19	1108W	HD 293082	1169	803290
67	A839, PS19	2534W	HD 291424	1170	805010
68	A840, PS11	075W	HD 289763	1142	
69	A841, PS19	2675W	HD 244262	1280	807990
70	A842, PS19	1870W	HD 241145	1285	806690
71	A843, PS13	1309W	HD 292298	1286	808970
72	A844, PS13	859E	HD 25844	1287	808910
73	A845, PS13	2215W	HD 253191	1281	808930
74	A846, PS11	1191E	HD 217707	1288	804650
75	A847, PS19	2520W	HD 244141	1226	808330
76	A859, PS13	3098E	HD 212210	1334	
77	A860, PS13	372W	HD 28008	1333	805451
78	A865, PS19	2205W	HD 241145	1332	809190
79	A866, PS19	2402W	HD 243215	1331	807430
80	D102, PS14	14481	HU 12520	034	800770
81	D104, PS11	78286	HU 12351	054	800650
82	D107, PS14	601	HU 19015	016	807660
83	D108, PS11	61498	HU 15514	068	808040
84	D114, PS11	13214	HU 140230	024	802320
85	D116, PS14	4632	HD 29881	538	802621
86	D117, PS11	76525	HU 13321	098	804310
87	D118, PS14	77037	HU 12514	049	802860
88	D120, PS11	74393	HU 13120	096	804510
89	D122, PS14	94564	HU 121343	091	803580
90	D123, PS14	98463	HU 17014	013	803820
91	D125, PS14	76956	HU 13125	071	808990
92	D126, PS14	77028	HU 188533	100	806960
93	D129, PS14	11371	HU 10482	001	809070
94	D133, PS11	76962	HU 117169	104	800580
95	D134, PS11	77162	HU 16630	108	803930
96	D137, PS11	78248	HU 15137	085	808860
97	D138, PS11	74327	HU 158536	092	809040
98	D143, PS14	97556	HU 170231	058	807480
99	D145, PS14	66472	HU 182512	055	807070
100	D147, PS14	15701	HU 151410	069	
101	D148, PS11	79039	HU 15148	060	809020
102	D149, PS14	95648	HU 130149	067	804130
103	D150, PS11	77105	HU 15524	066	803480
104	D152, PS10	62439	HU 10113	119	809080
105	D158, PS11	2533W	HD 29158	1132	
106	D164, PS11	68005		248	808850
107	D165, PS11	78114	HU 17727	249	
108	D166, PS11	2394W	HU 18748	250	
109	D171, PS13	69163	HU 16171	251	
110	D172, PS13	140205	HU 131172	252	
111	D173, PS13	140203	HU 11751	253	
112	D181, PS13	140204	HU 15181	254	803990
113	D300, PS14	11372	HU 17775	231	803160
114	D301, PS11	364W	HD 29501	1060	807550
115	D302, PS13	62903	HU 13302	232	
116	D303, PS13	140120	HU 15303	233	
117	D304, PS13	140121	HU 16617	234	809010
118	F238, PS11	1416W	HD 298435	940	
119	F239, PS11	2314W	HD 294435	939	
120	F242, PS10	799W	HU 10980	551	